
How to do update by HIDBootloader

1. Make sure the power is turn off.
2. Keep shorting the Pin 1 & Pin 3 of JSP on PCB.

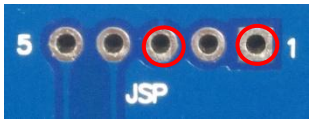

3. Turn on the power then connect USB with computer.
4. Open the HIDBootloader. There is a bar will became green. And the message on the bottom right will show”Connected”.
5. Remove shorting.
6. Click  to choose the import file.
7. Click  to download the file.
8. After finish download, reset the power.

