PROCULUS UART

Intelligent Display Starter Kit:

Quick start guide + Connection diagram



Premessa/Premise:

Lo Starter Kit consente di comunicare con il modulo display da PC. Questo è utile in fase di progettazione dell'interfaccia grafica per avere un riscontro immediato testando in tempo reale il risultato finale sul display.

Dopo aver disegnato la grafica in UnicView AD (riferirsi allo 'User Manual' dedicato), collegare il modulo display al PC facendo riferimento allo schema di collegamento riportato in questa guida.

The Starter Kit allows you to communicate with the display module from a PC. This is useful in the design phase of the graphic interface for immediate feedback by testing the final result on the display in real time.

After drawing the graphics in UnicView AD (refer to the dedicated 'User Manual'), connect the display module to the PC referring to the connection diagram shown in this guide.

Indice/Index:

Pag. 3 – **P32240J28C_N01/T01** *(size 2,8", No touch/RTP)*

Pag. 4 – **P32240J35C_N01/T01** *(size 3,5", No touch/RTP)*

Pag. 5 – **P48272J43C_N01/T01/P01** *(size 4,3", No touch/RTP/CTP)*

Pag. 6 – **P80480J50C_N02/T02/P01** *(size 5", No touch/RTP/CTP)*


Pag. 7 – **P10600J70I_N03/T03/P03** *(size 7", No touch/RTP/CTP)*

Pag. 8 – **P80600J80I_ N01/T01/P01** *(size 8", No touch/RTP/CTP)*

Pag. 9 – **P10600J101I_ N01/T01/P01** *(size 10,1", No touch/RTP/CTP)*


P32240J28C_N01

P32240J28C_T01

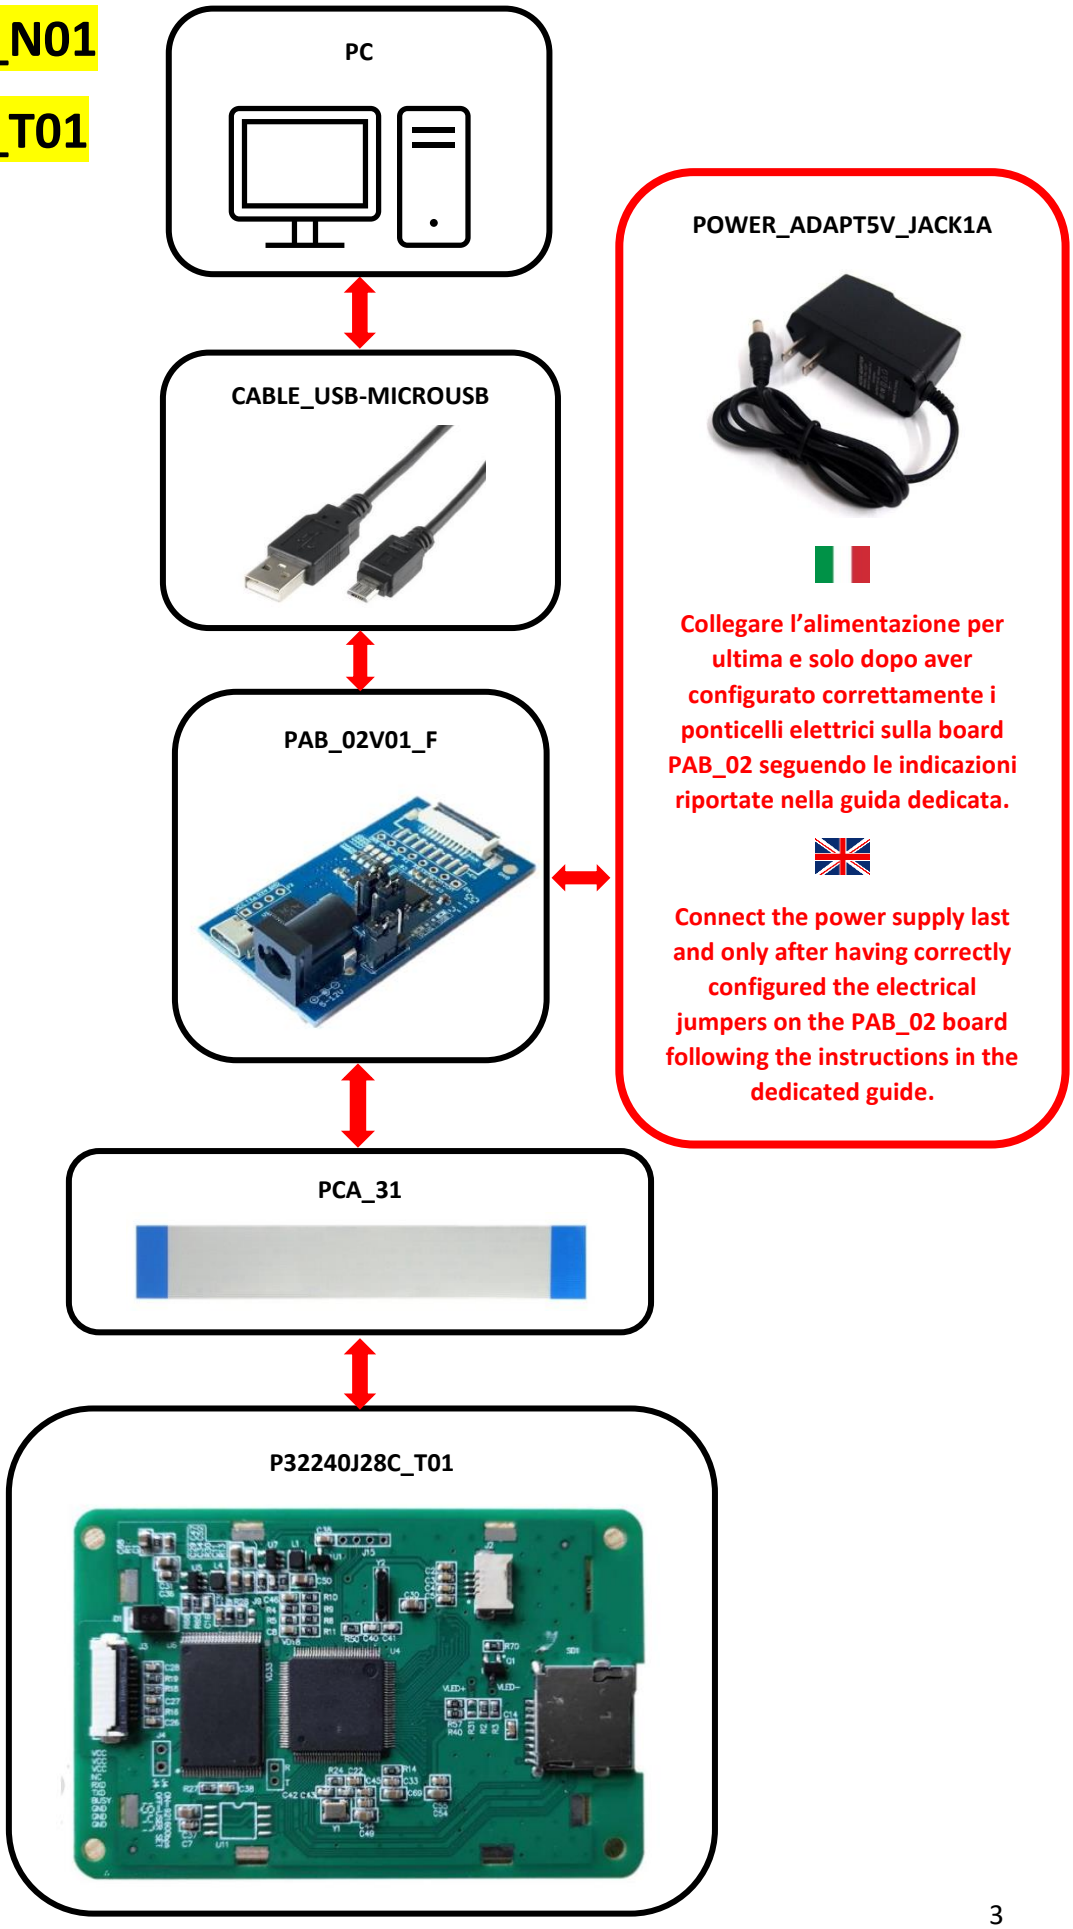

P32240J35C_N01


P32240J35C_T01

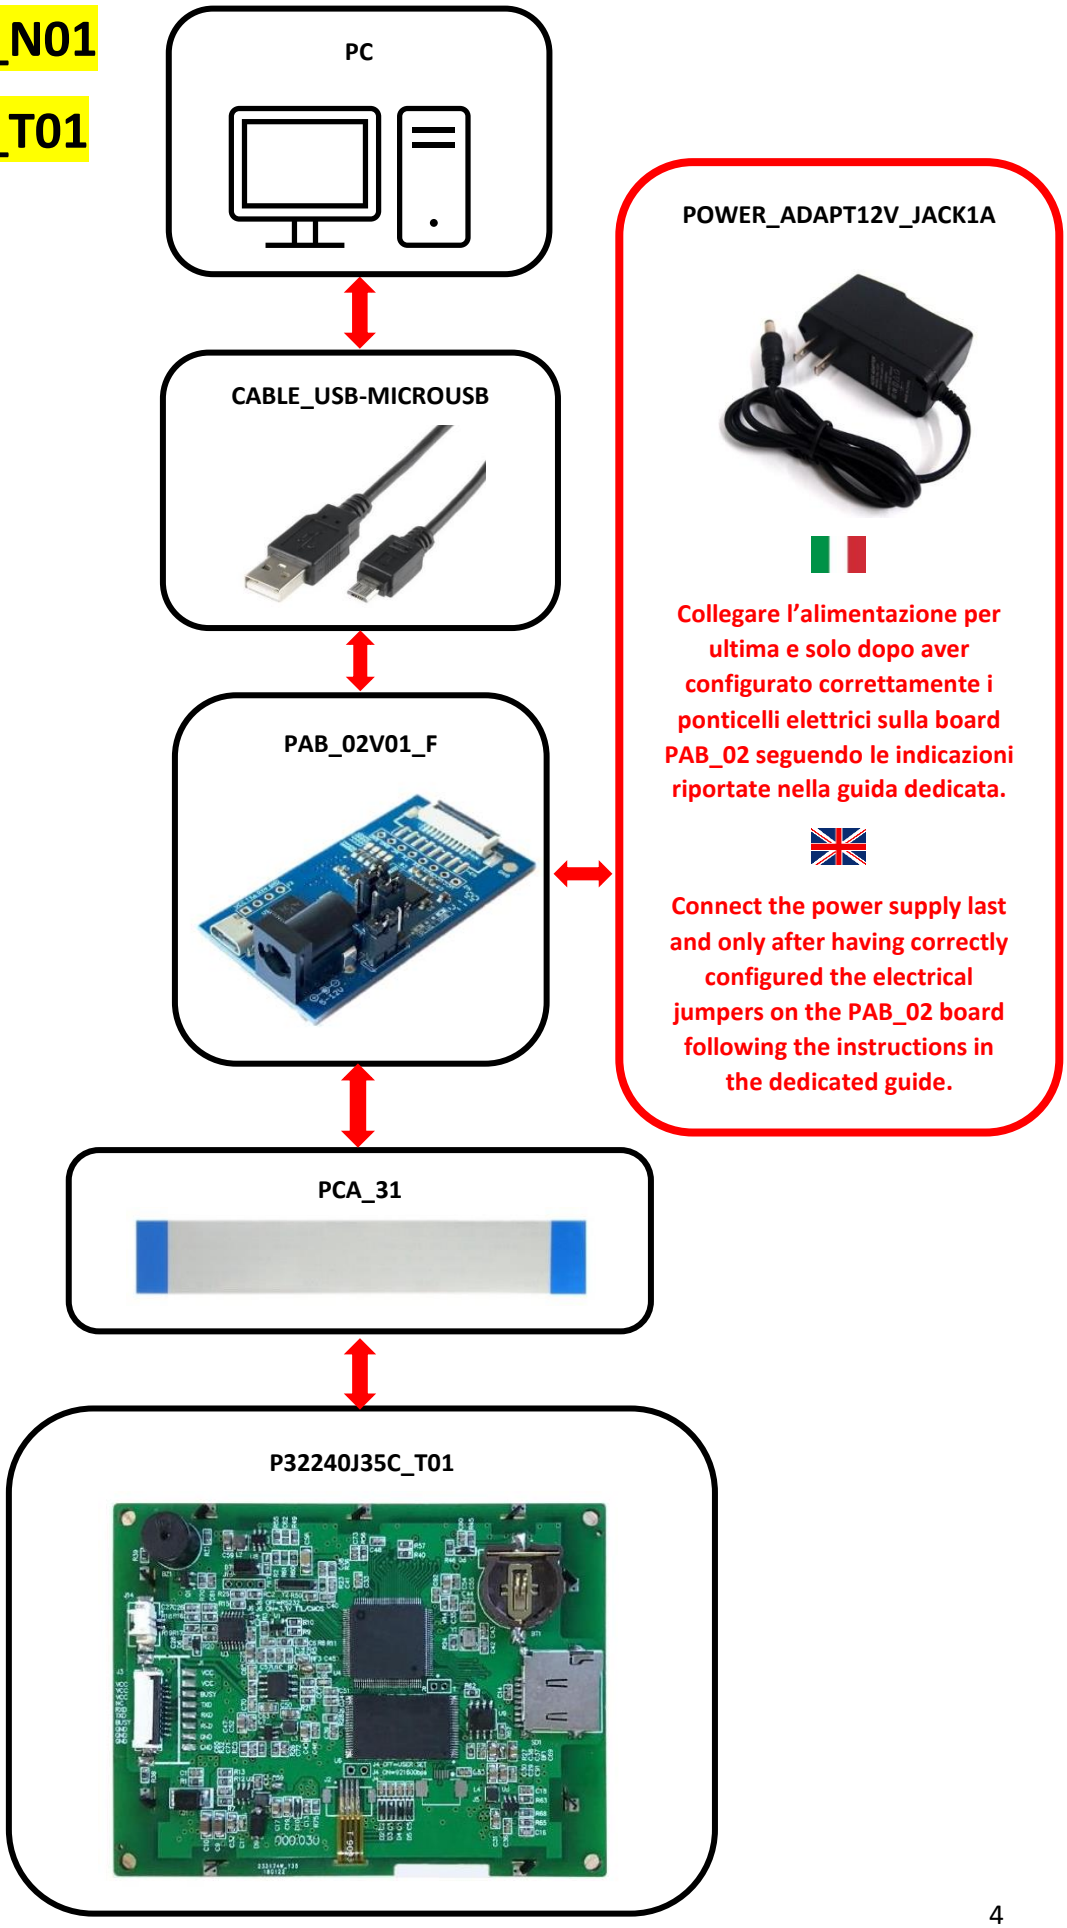

P48272J43C_N01

P48272J43C_T01

P48272J43C_P01

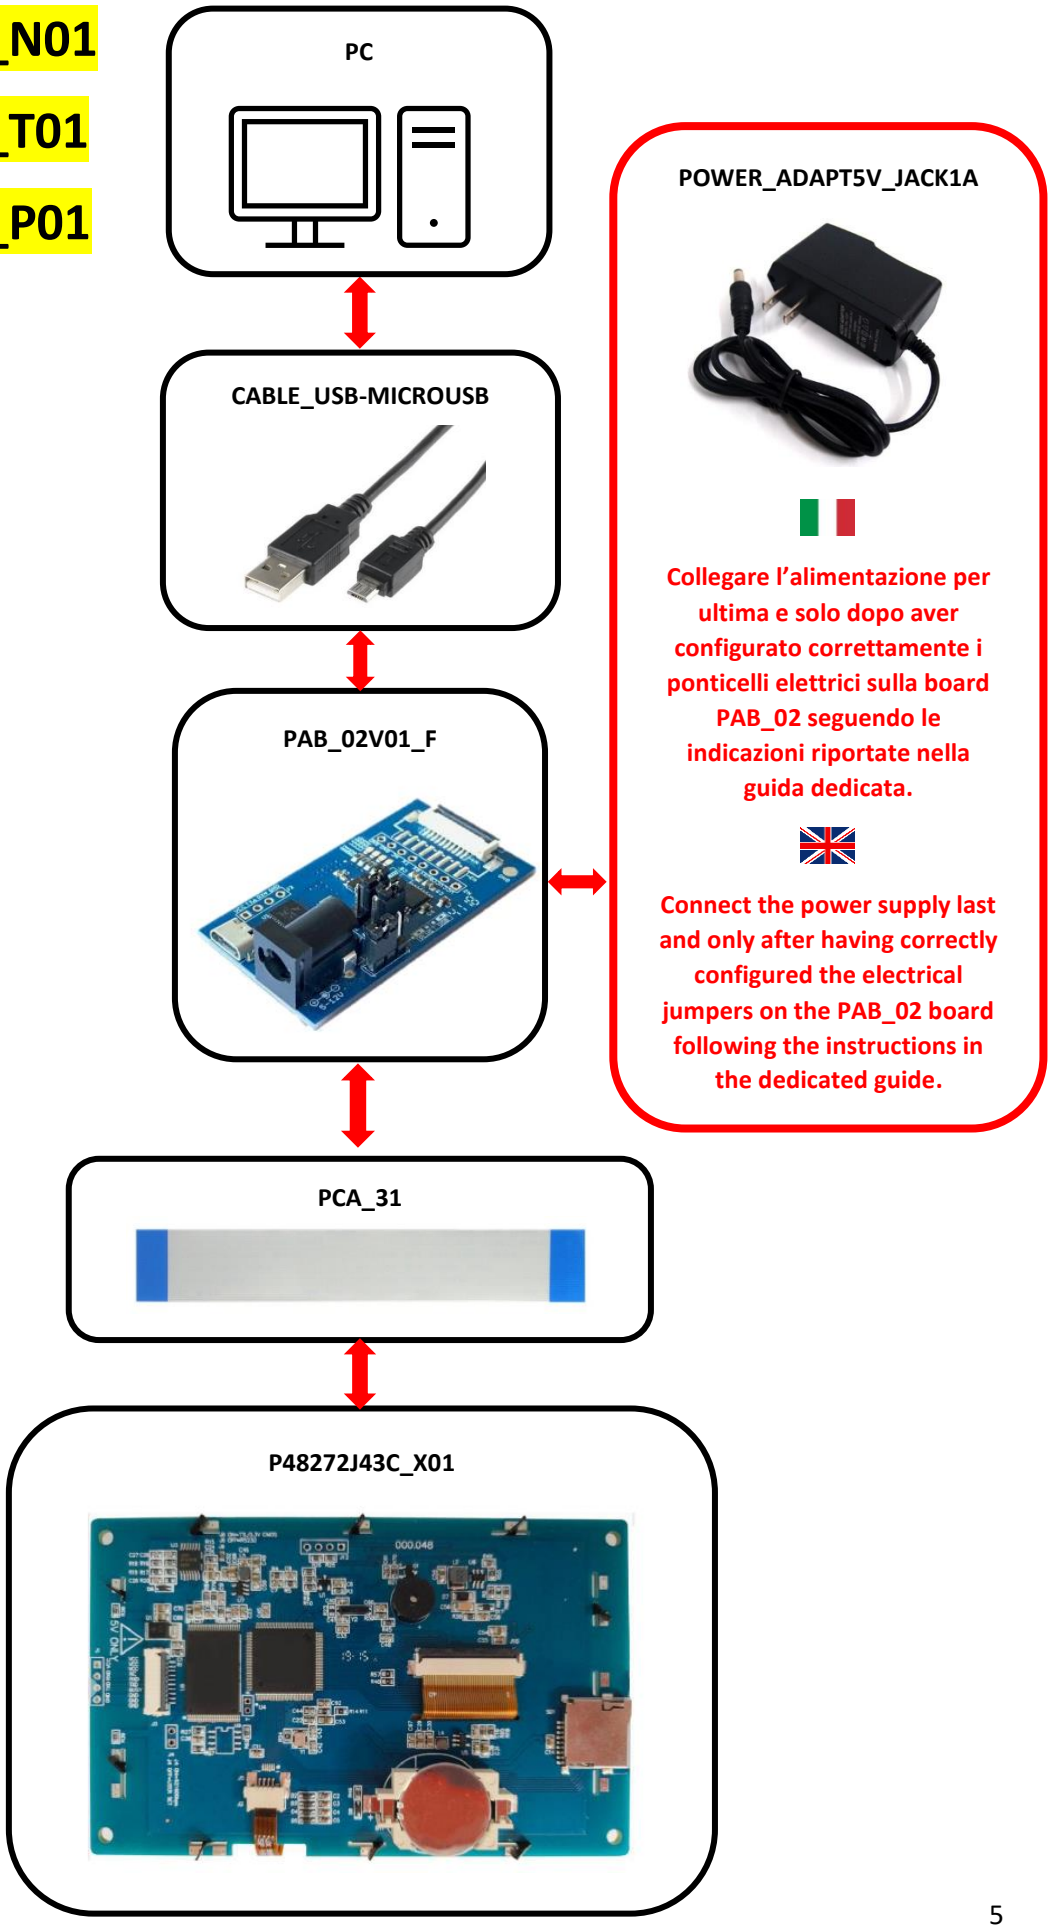

P80480J50C_N02

P80480J50C_T02

P80480J50C_P02

PC

CABLE_USB-MICROUSB



PAB_02V01_R



PCA_40



P80480J50C_X02



POWER_ADAPT5V_JACK1A




Collegare l'alimentazione per ultima e solo dopo aver configurato correttamente i ponticelli elettrici sulla board PAB_02 seguendo le indicazioni riportate nella guida dedicata.

Connect the power supply last and only after having correctly configured the electrical jumpers on the PAB_02 board following the instructions in the dedicated guide.

P10600J70I_N03

P10600J70I_T03


P10600J70I_P03

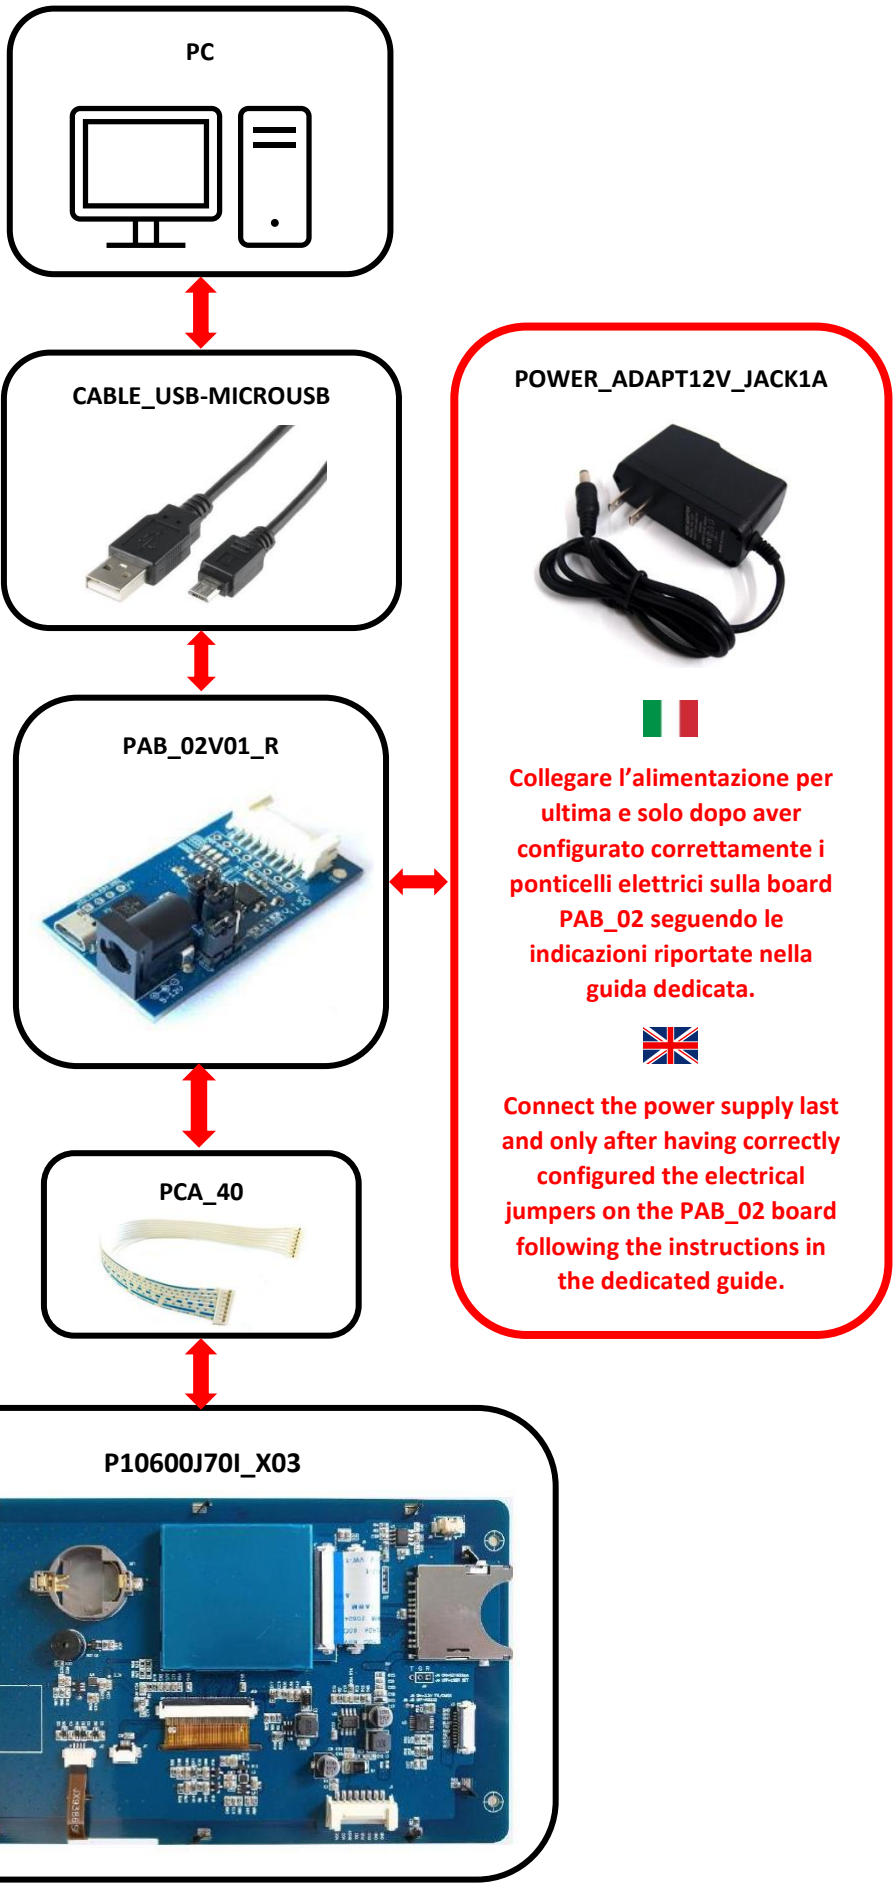

P80600J80I_N01

P80600J80I_T01

P80600J80I_P01

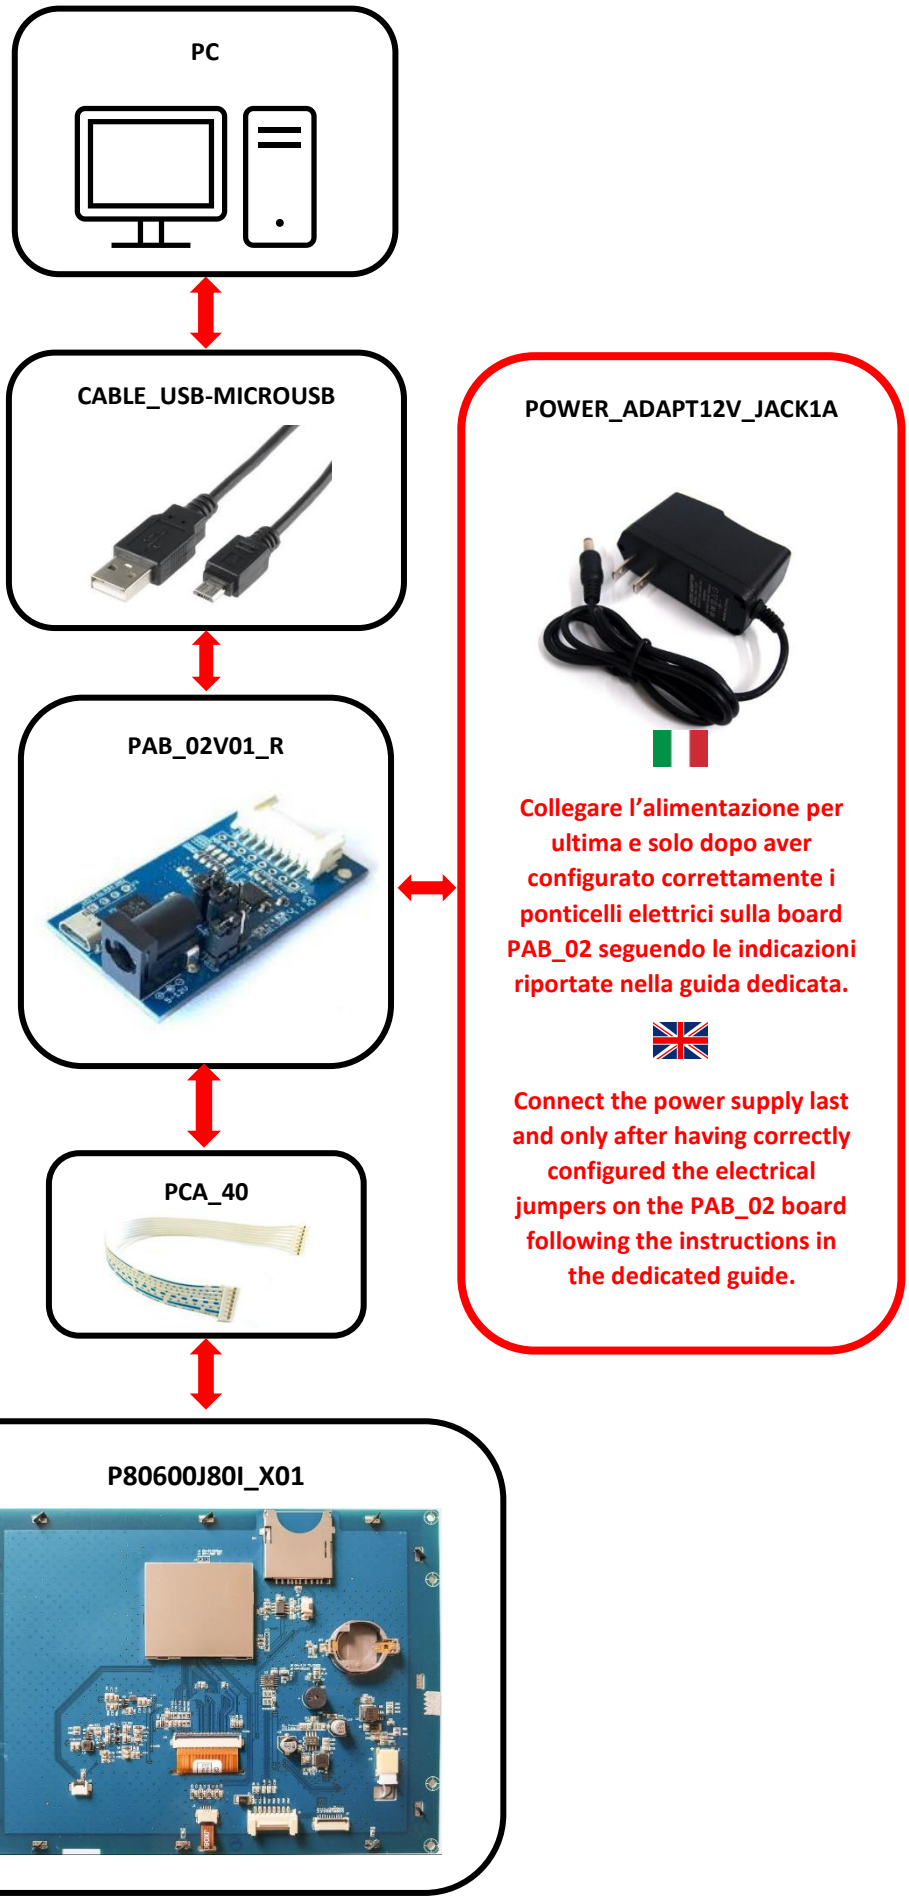

P10600J101I_N01

P10600J101I_T01

P10600J101I_P01

